

"HOW TO UPLOAD NEW STYLES TO I455"

Loading a Style File

 
New styles can be loaded to the Style numbers 207–211, and you can play them like the internal preset Styles.

The following two Load operations are available.

- Loading of a Style file (.sty) saved on the root directory on the USB flash memory
- Loading of a Style file (.sty) transferred from a computer via the Musicsoft Downloader and stored in the internal memory of this instrument


1 Hold the [FILE CONTROL] button for 03 second to call up the File Control display.

2 Use the CATEGORY [+] and [-] buttons to call up “Load STY.”



3 Press the [0/EXECUTE] button.

A name of a Style file in the USB flash memory or internal memory of this instrument will appear on the display. As desired, rotate the dial to select a different Style file.

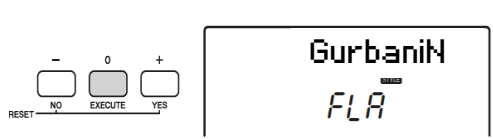

4 Press the [0/EXECUTE] button again to Load destination, “Load To?(207–211) appears on the display.

5 Press the [0/EXECUTE] button again to confirmation message will appear.

6 Press the [0/EXECUTE] button again, or the [+ /YES] button to execute the Load operation.

After a while, a message indicating completion of the operation appears.

7 Press the [STYLE] button, rotate the dial to select a Style from 207–211, then try playing it back.

For MusicSoft Downloader, please refer to your owners manual.