



*To You
Best Wishes
from Yamaha*




Rock, Rap & Learn

PSR **S910**

Basic Guide Book

About Yamaha Portable Keyboard

Three Main Features - Song, Style & Voice

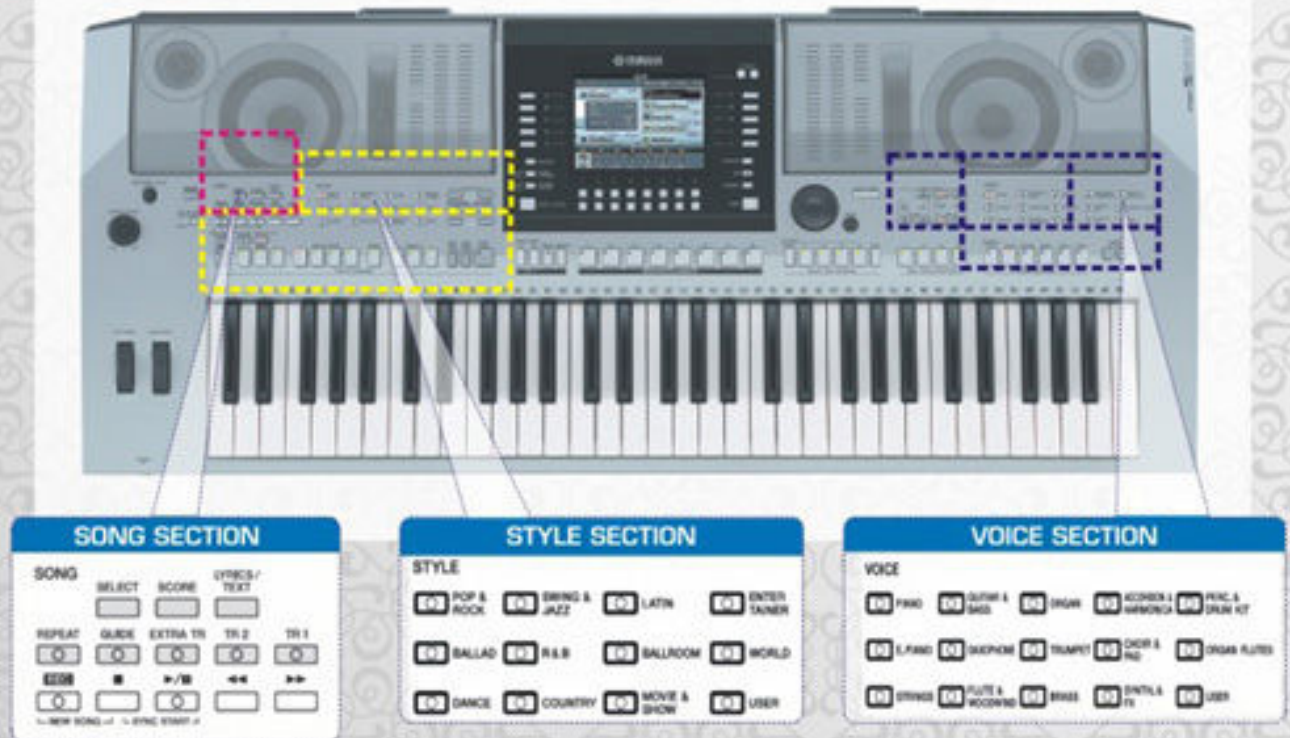

The 3 Basic main Consistent features are common from our Entry level models (E Series) our high end (S Series) to our flag ship model (Tyros 3)

SONGS SECTION

You can enjoy listening to the internal Songs & also playback SMF song data (using USB flash memory)

STYLE SECTION

You can select from various kinds of music genre (Auto accompaniment or Rhythms) for playing along with you just like a complete real band.

VOICE SECTION

You can select from the wide range of Voice (instruments, patch) like Piano, flute, brass, strings and many more.

About PSR-S SERIES

Yamaha portable keyboard, S SERIES It also has Indian rhythmical styles like Bhanjan, Bhangra & has amazing Indian musical instruments' voices like sitar, tabla and more. It has been loved by many Indian people so far.

With this book, we hope you can relate yourselves more to Indian music and enjoy playing Indian songs!

PLAYING VOICES


Our S Series have a variety of Voices, starting from amazing PIANO, GUITAR to realistic reed instruments like SAXOPHONE & many more.




Voice section

Let's Select A VOICE & Play

- 1 Press the PART SELECT RIGHT 1 button
- 2 Press one of the VOICE Category, (Ex SAXOPHONE They have different types of SAXOPHONE)
- 3 Press [A] button from the [A] -- [J] to Select the desired Voice.
(for S 550 its VOICE 001 Saxophone)

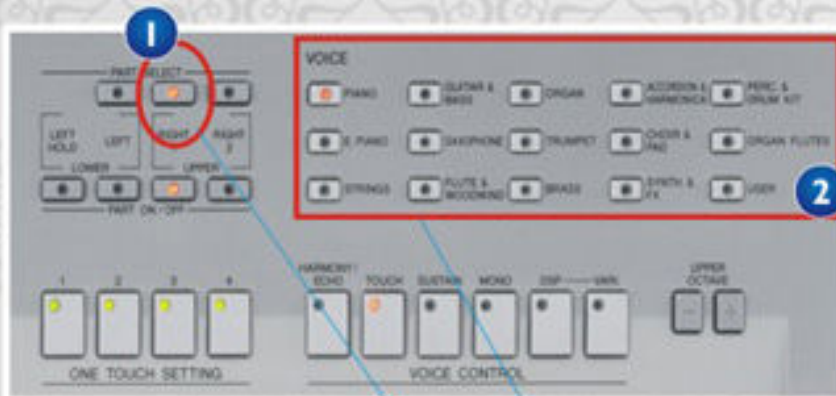

Voice section

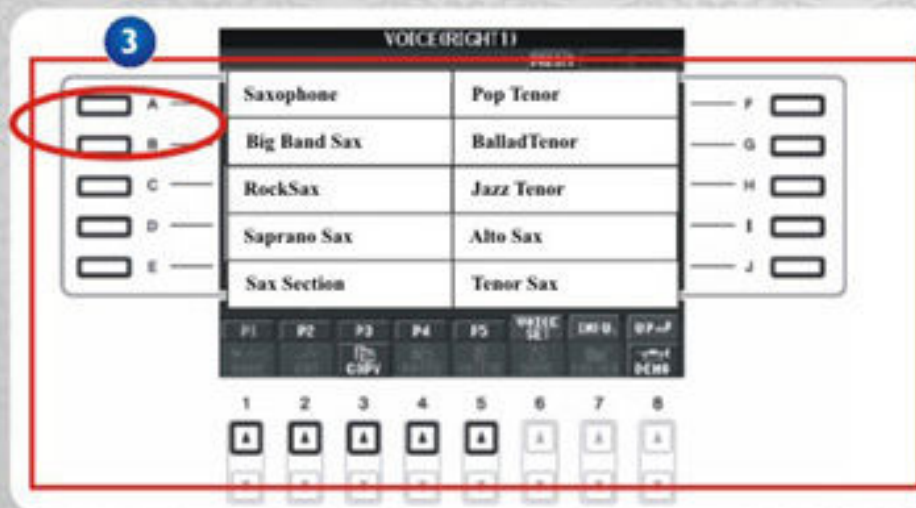

Playing with Automatic Accompaniment "STYLE"

A SIMPLE WAY TO MAKE YOUR PLAYING MAGICAL

The Style feature lets you produce automatic accompaniment playback simply by playing "chords" with your left hand. This is like playing with the full band or orchestra, even if you're playing all by yourself.


Our S SERIES keyboards have a variety of Styles.
S 550 : 176 Styles / S 710 : 232 **Styles** / S 910 : 322 **Styles**



STYLE SECTION

Playing With Styles

FIRST, LET'S SET THE PANEL

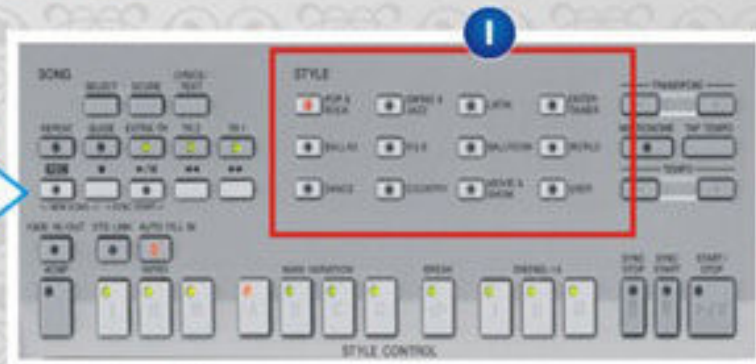

- 1 Press the COUNTRY button in the STYLE category
- 2 Press P2 to select the second page
- 3 Press [H] button from [A] – [J] to select Country Brothers (For S 550 its COUNTRY 001 New Country)



BETTER THAN EVER S SERIES STYLE SECTION HAS 3 INTRO 4 VARIATION & 3 ENDING

*Now we have to set our **STYLE SECTION***



- STEP 1**
- STEP 2**
- STEP 3**
- STEP 4**

- STEP 1 SELECT ACMP ON/OFF** With this we will get other instruments playing along with us (make sure it is ON (orange colour))
- STEP 2 SELECT MAIN VARIATION** We have 4 different MAIN VARIATIONS (A B C D).
- STEP 3 SELECT INTRO** We have 3 INTRO (I II III introductions) It means we can use any of the 3 INTRO which we like.
- STEP 4 SELECT SYNC START** By pressing this we are ready to start playing VOICE & STYLE together.
- STEP 5 SELECT TEMPO/TAP** With this function we can adjust The TEMPO ([-] [+] & JOG DIAL)

WHENEVER YOU ARE USING STYLE FUNCTION IT IS ALWAYS GOOD TO FOLLOW THESE BASIC 5 STEPS. THIS WILL MAKE YOUR SONG MORE ATTRACTIVE...



More magic? – ONE TOUCH SETTING(OTS) & OTS LINK


ONE TOUCH SETTING (OTS) is a powerful & very convenient feature that automatically selects the most appropriate voice with effects for the current Style selected by you. Also with the **OTS LINK** button, as you change the MAIN VARIATION (A B C D), the Voice will change Automatically..... *mmmm*

THIS IS LIKE MAGIC !!!!!!!



THE SPICY MULTI PADS

MULTI PADS are LOOPS of instruments & percussions (guitar, drums etc). It allows you to add variety to your performance.(S 710/ S 910/ TYROS 3)

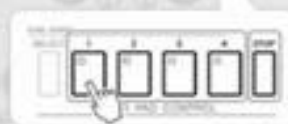


Press the SELECT button

Select from [A] – [J] (refer to pg 8)

Press MULTI PAD CONTROL

1 or 2 or 3 or 4

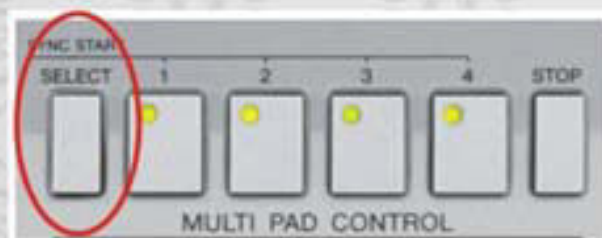

Using the [ots link](#) you can get automatic multi pad Selected for you. With this help you can play a lot more like drum Shots or some trance loops some guitar stumming Types and lots more.
sooo
Try it.




USB RECORDER

Audio Recording

USB RECORDER- with this, we can record our performance in the USB connected to our S SERIES (S 710 / 910). The performance is saved in stereo waves format (WAV file) 44.1 kHz sample rate/16 bit resolution.




- 1 First connect the USB flash memory to the USB TERMINAL (rear of the keyboard). Set the desired Style, Voice, OTS etc

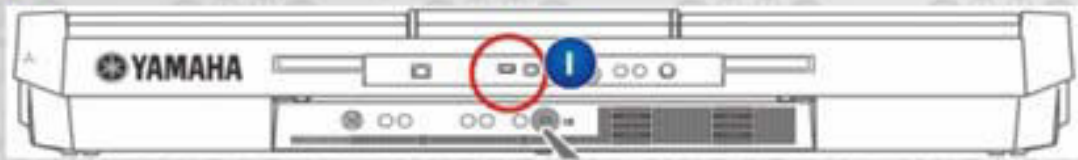

- 2 Press the [USB] button



- 3 Press the [E] (RECORDER) button
- 4 Press [J] REC button then begin your performance

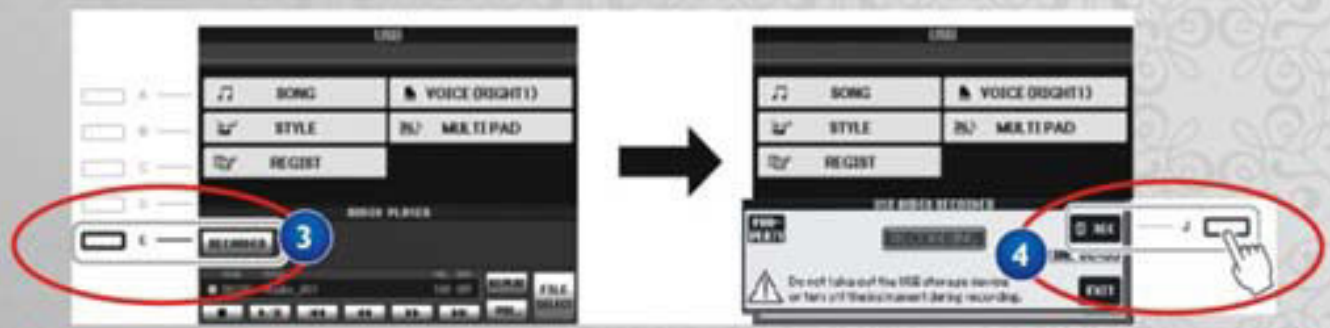

To playback you recorded file.

1 Press file select.

2 Play



To name your file

1 Tab to ► USB


2 Press SAVE

3 Enter desired file name



Vocal Harmony

MIC - We can sing along with this song by just connecting a microphone to the keyboard (s 910 / Tyros 3).

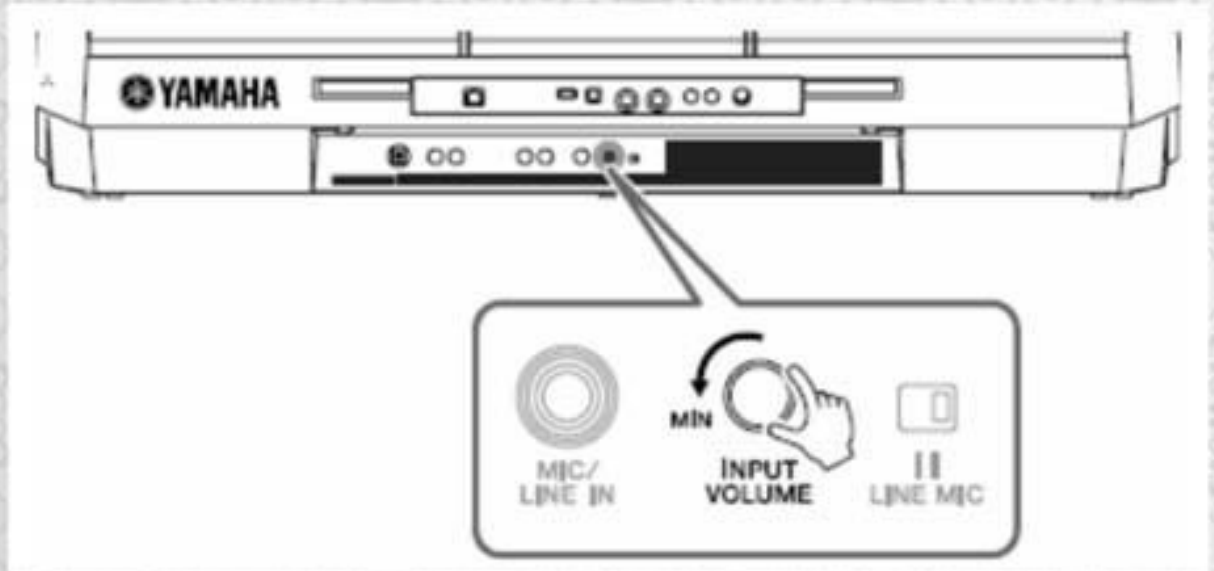

You can use the **VOCAL HARMONY** button to apply more singers to sing along with you.



NOTE: Remember you have to play Chords. accomp button ON

SONGS

Playback Preset Songs

We have a wide range of preset songs in our S SERIES that we can enjoy & practice too.

Let's enjoy these preset songs.

LET'S TRY "AMAZING GRACE" S SERIES



In the SONG section, Press SELECT button to call up the song selection display

- 1 Press the **TAB TO USER** (For S 550 press **USER** button from the **SONG** section)
- 2 Select the song [A] "AMAZING GRACE"
- 3 Press the **SONG [START / STOP]** button to Start the song




MP3 songs playback (only with S 910)

MP3 Songs Playback (only with S910)

Now we can playback MP3 format files stored directly from the USB DRIVE AFTER CONNECTING THE USB TO THE S SERIES

- 1 Press the USB button
- 2 Press FILE SELECT
- 3 Select from [A] - [J] buttons
- 4 Press to start the MP3 file

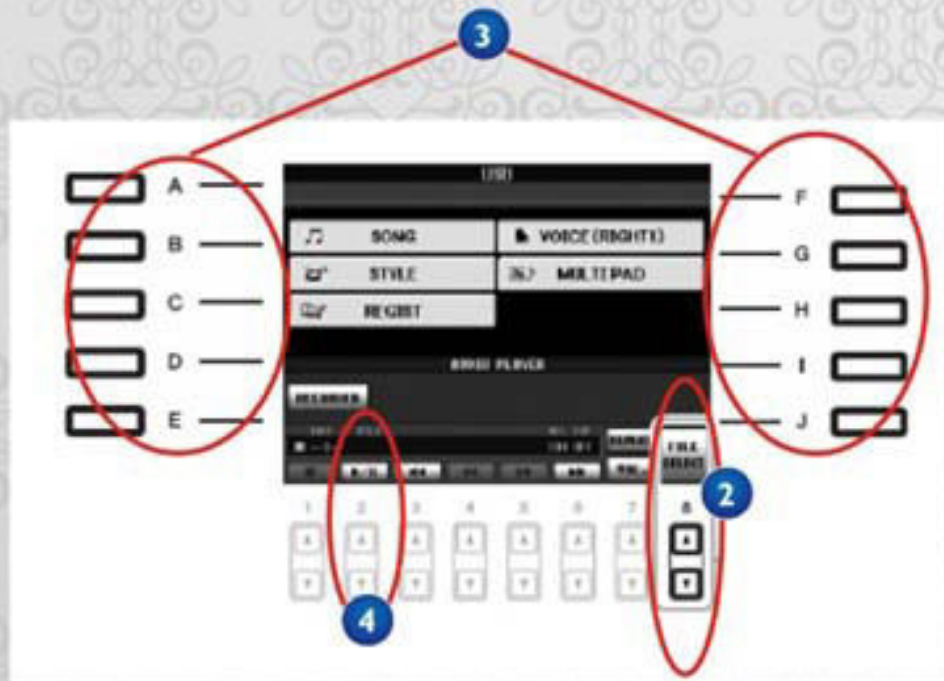

HOW TO RECORD YOUR SONG

Quick Recording

Prepare **STYLE & VOICE** setting for your song.



How to record your song



- 1 From the **STYLE** category select
Ex.) BALLAD—P2—[E]—chillout
- 2 **VOICE**—OTS
- 3 To Set **NEW SONG** Press [REC]+[STOP] button together.
- 4 Press **REC** button
(For S 550 press the **SONG MODE**
from the **SONG** section
& then **REC** button)

SO LET'S RECORD
YOUR SONG



After you finish the performance,
stop recording.



Enjoy your
performance!




How to Save the Data on USER & USB

AFTER CREATING (RECORDING) THE SONG




THE SONG WILL BE SAVED AS **SMF (Standard MIDI File) Format**.
NOW WE CAN SAVE IT ON

- 1 THE USER (internal memory)
- 2 THE USB STICK (external memory)

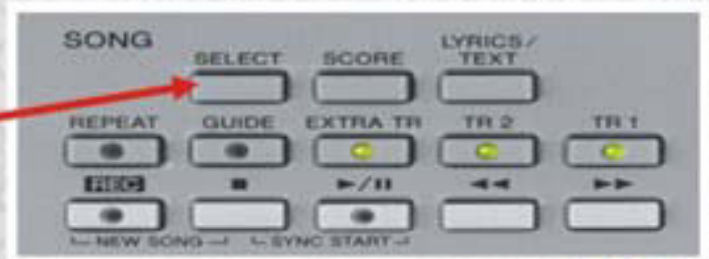


- 1 Press the TAB USER
- 2 Press the SAVE button
- 3 Enter the desired name for your song Ex HERO
- 4 Press **OK**

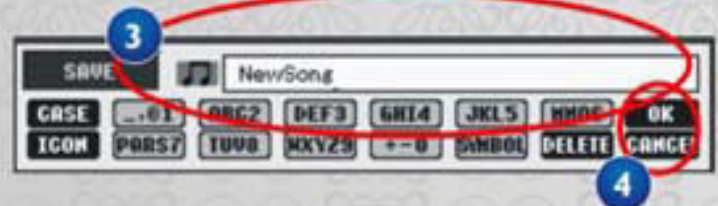

AND THE FILE IS SAVED IN THE USER MEMORY OF THE KEYBOARD

Save the data in to **THE USB Pen drive.**

AFTER CONNECTING THE USB TO THE PSR S SERIES

Press the TAB  USB

Same as to the USER refer to(pg 21)

AND THEN THE SONG IS SAVED ON THE USB STICK



ON THE COMPUTER it will be shown as HERO.MID (saved in midi format)

**YOUR
DATA IS
SAVED !!**



Happy Playing.
As its always fun
playing on
a



Thank you

By Yamaha Music India Pvt. Ltd.



No part of this book may be reproduced or copied in any form or by any means [graphics, electronics, mechanical, including photocopying, recording, taping, or information retrieval systems] or reproduced on any disc, tape perforated media or other information storage device, etc., without the written permission of the publisher. Breach of this condition is liable for legal action.

All disputes are subject to Gurgaon Jurisdiction only.

Not for Sale

To be distributed free of charge only with Yamaha Products for which they are meant in the Republic of India.

