

HOW TO LOAD KITS FROM A PENDRIVE TO DTXM12


INSERT PENDRIVE INTO DTXM12




PRESS UTILITY BUTTON



M12 SCREEN

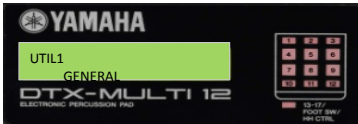


PRESS  ARROW BUTTON TILL YOU SEE FILE

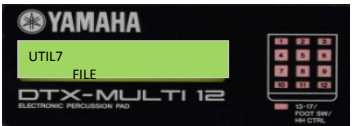


PRESS ENTER




PRESS  ARROW BUTTON TILL YOU SEE LOAD

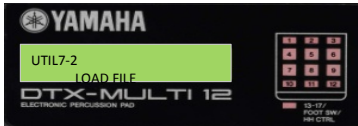


PRESS ENTER

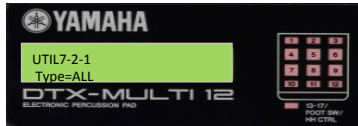


PRESS ENTER

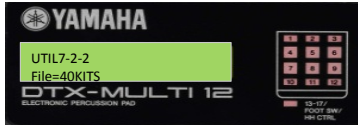

PRESS ENTER

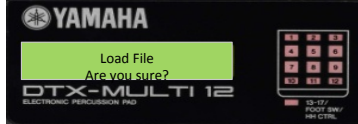

PRESS ENTER

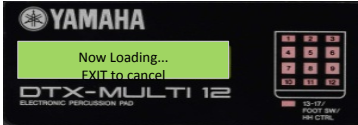

LET THE LOADING FINISH
PRESS KIT TO SEE THE KITS

